

1	Schraube Special screw Vis Tornillo	14500493	22	O-Ring O-ring Joint torique Aro torico	13300094	45	Distanzstück Spacer Guide á distance Distanciador	14500525	66	Achse Pin Axe Eje	14500502
2	Deckelhalterung Exhaust cover holder Support Soporte tapa	14500494	23	Rückschlagventil Check Valve Soupape Valvula antiretorno	14500559	46	Zugfeder Tension spring Ressort de traction Muelle de traccion	14500526	67	Schenkelfeder Tersion spring Ressort á branches Muelle en pata	14500503
3	O-Ring O-ring Joint torique Aro torico	14500117	24	Zylinderring Cylinder ring Anneau de cylindre Espaciador del cilindro	14500558	47	Magazinbolzen Magazine post Tige ajusteur Cargador bulon	14500522	68	Vorschieber Pusher Chariot Empujador	14500501
4	Deckel Exhaust cover Cache Tapón	14500551	25	O-Ring O-ring Joint torique Aro torico	14500579	48	Sicherungsmutter Safety nut Ecrou de sûreté Tornillo de seguridad	14500539	69	Schutzkappenknopf Dust cover hook Bouton pour le de securité Boton de seguridad	14500513
5	Schalldämpfer Exhaust filter Amortisseur de bruit Silenciador	14500553	26	Puffer Bumper Amortisseur Amortiguador	14500530	49	Abdeckung Contact arm cover Cache Tapa	14500511	70	Spannhülse Splint pin Douille fendue Pasador elastico	13300249
6	Kappendichtung Exhaust cover seal Joint plat Cabeza de fijacion	14500550	27	Gehäuse Body Corps Cuerpo	14413994	50	Scheibe Disc Rondella Arandela	14500510	71	Sperrklaue Check pawl Griffe Trinquete de seguridad	14500496
7	Zylinderschraube Allen bolt Vis cylindrique Tornillo allen	13301138	31	Spannhülse Splint pin Douille fendue Pasador elastico	13300254	51	Schutzkappe Dust cover Protecteur Tapa protectora	14500512	72	Achse Pin Axe Eje	14500500
8	Schutzschiene Protector Rail de converture Rail de cobertura	14514202	32	Auslöseventil, kompl. Release valve, cpl. Soupape de déclenchement cpl. Valvula de desconexion cpl.	14508276	52	Gummischeibe Rubber disc Rondelle en caoutchouc Arandela de caucho	14500184	75	Vorschieberkolben Feed piston Piston d'avancement Piston alimentador	14500504
9	Kappe Cylinder cap unit Capuchon Cabeza	14413998	33	Auslöser, kompl. Trigger, compl. Lever de détente, complet Gatillo de disparo completa	14514133	53	Magazin Magazine case Chargeur Cargador	14500517	76	O-Ring O-ring Joint torique Aro torico	14500583
10	Dichtung Seal Joint plat Junta obturadora	14413997	34	Auslösebügelführung Contact arm guide Guide pour sécurité Guía del estribo de seguridad	14500569	54	Achse Pin Axe Eje	14500519	77	Druckfeder Pressure spring Ressort á pression Muelle de presion	14500506
11	Distanzbuchse Spacer exhaust Douille de distance Casquillo distanciador	14500545	35	Abdeckung Cover Cache Tapa	14500571	55	Halterung Post retainer Support Barra de soporte	14500521	79	Führung Spring guide Guidage Guía	14500509
12	Kappeneinsatz Piston stop Douille supérieure Cabeza superior	14500552	36	Druckfeder Pressure spring Ressort á pression Muelle de presion	14500515	56	O-Ring O-ring Joint torique Aro torico	14500581	80	Stützring Support ring Baque d' appui Aro de soporte	14500505
13	Druckfeder Pressure spring Ressort á pression Muelle de presion	14500560	37	Auslösebügel Contact arm unit Palpeur de sécurité Estribo de seguridad	14503238	57	Kopfstück Nose Tête Testero	14500491	81	Federtopf Spring plate Cuvette de ressort Piatto di molla	14500507
14	Hauptventilscheibe Head valve washer Soupape principale rondella Arandela cabeza de la valvula	14500554	38	O-Ring O-ring Joint torique Aro torico	13300013	58	Zylinderschraube Allen bolt Vis cylindrique Tornillo allen	13301137	82	Sicherungsring Circlip Clips Aro de seguridad	13300410
15	O-Ring O-ring Joint torique Aro torico	13300095	39	Reduzierstück End cap Réducteur Reductor	14500541	59	Druckfeder Pressure spring Ressort á pression Muelle de presion	14500321	84	Abstandshalter Spacer Espaceur Espaciador	14413979
16	O-Ring O-ring Joint torique Aro torico	14500577	40	Zylinderschraube Allen bolt Vis cylindrique Tornillo allen	14500538	60	Druckfeder Pressure spring Ressort á pression Muelle de presion	14500497	85	Zwischenhülse Cylinder, intermediate valve Arbre intermédiaire Valvula intermedio cilindro	14414001
17	Hauptventil Head valve piston Soupape principale Valvula principal	14500555	41	Scheibe Disc Rondella Arandela	13300490	61	Klinke Door latch Loquet Trinquete	14500499	125	Anschlußnippel Air hose connector Embout de raccordement Conector de aire manguera	14000244
18	Zylinderdichtung Cylinder seal Douille Sellado cilindro	14500556	42	Magazindeckel Magazine cover Couvercle de chargeur Tapa cargador	14503239	62	Achse Pin Axe Eje	14500498	126	Dichtscheibe Gasket Joint plat Junta obturadora	14400063
19	Kolben Piston Piston Piston	14500527	43	Stopfen Post cap Capuchon Capuchon	14500905	63	Kopfstückklappe Nose housing door Clapet de la tête Puerta testero	14500495			
20	O-Ring O-ring Joint torique Aro torico	14500578	44	Coilführungsteller Nail support Support du rouleau de clous Soporte clavos	14503245	64	O-Ring O-ring Joint torique Aro torico	14502037			
21	Zylinder Cylinder Cylindre Cilindro	14500557				65	Spannhülse Splint pin Douille fendue Pasador elastico	13300275			

Typ  
Type

572 DCC

(Art.-Nr. 12100673)

